


**IPSWP02NA**

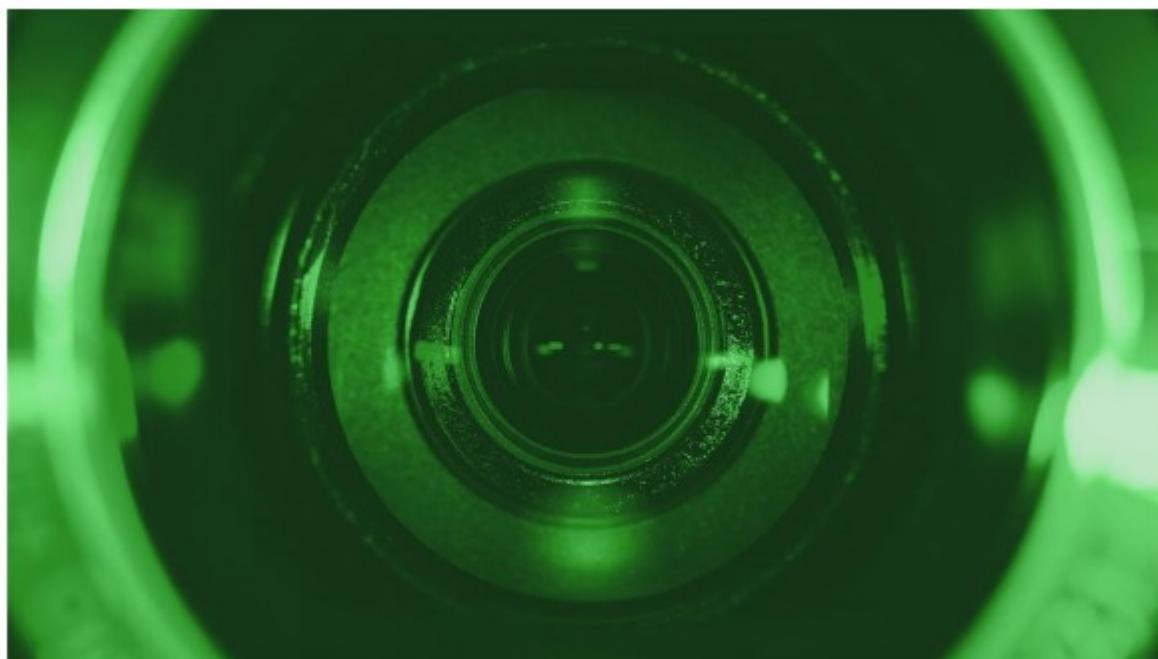

[www.comelitgroup.com](http://www.comelitgroup.com)


 **Comelit®**  
Passion. Technology. Design.

Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

# Hardware Description

## Front Panel

The front panel composed by PSE output port, input port and relevant indicator, as shown below:

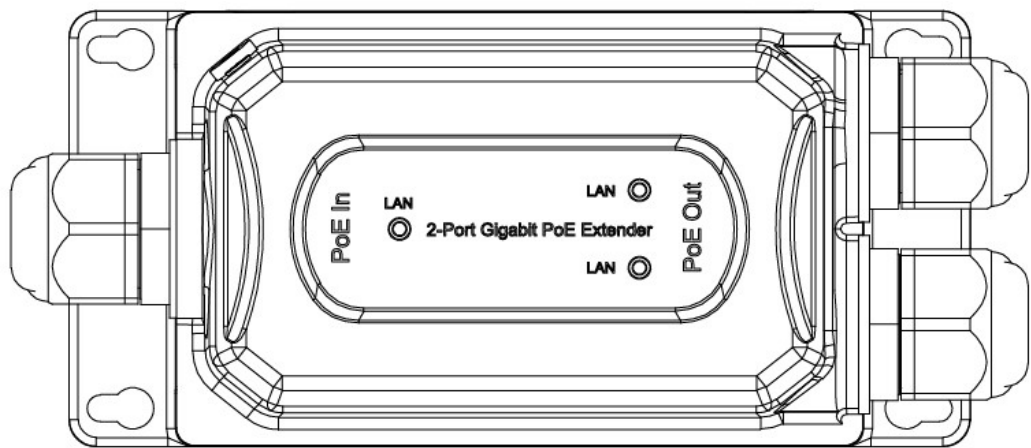


## LED indicator

LED	Color	Function
LAN	Green	Off: No device is connected to the corresponding port Light: Indicates the link through that port is successfully established at 10/100/1000Mbps. Blink: transmitting data and power


## Left Panel

Schematic diagram of left panel: input port (PoE In) and grounding column, Standard network Cate5 cable (line diameter 5.5mm).

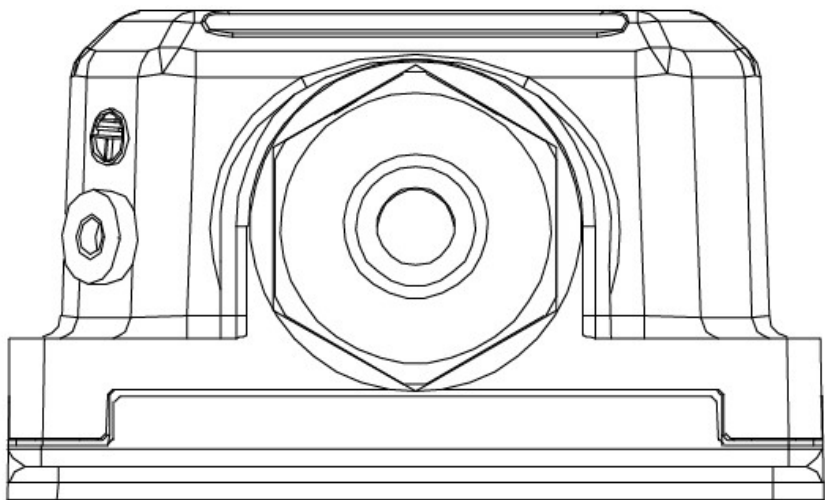

## Desktop Installation

Install the machine on a desktop, place the machine carefully on the counter, the bottom is as follows:


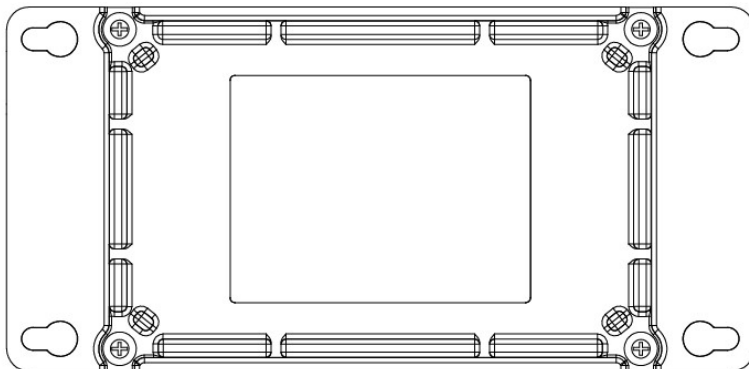


## Wall-mounted installation

Please follow these steps to install the machine:

First fix the four screws on the wall (screw cap diameter recommended 5.5-6.5mm) and turn the machine upside down.

Align the four fixing holes of the machine as shown below and hang the machine smoothly on the screws.

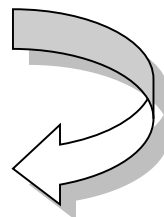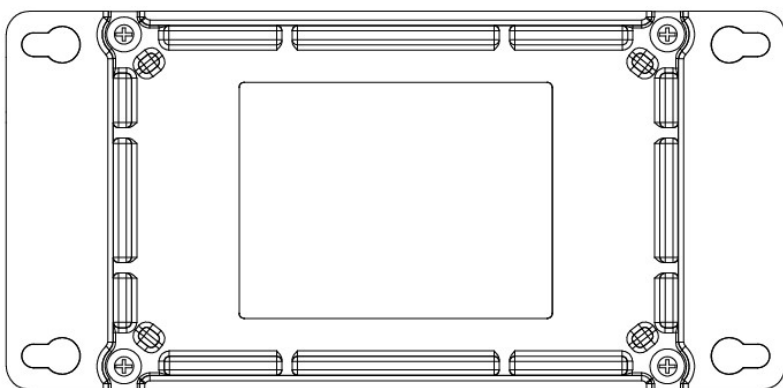

## Application diagram of PoE injector:

